


soop mini 26x

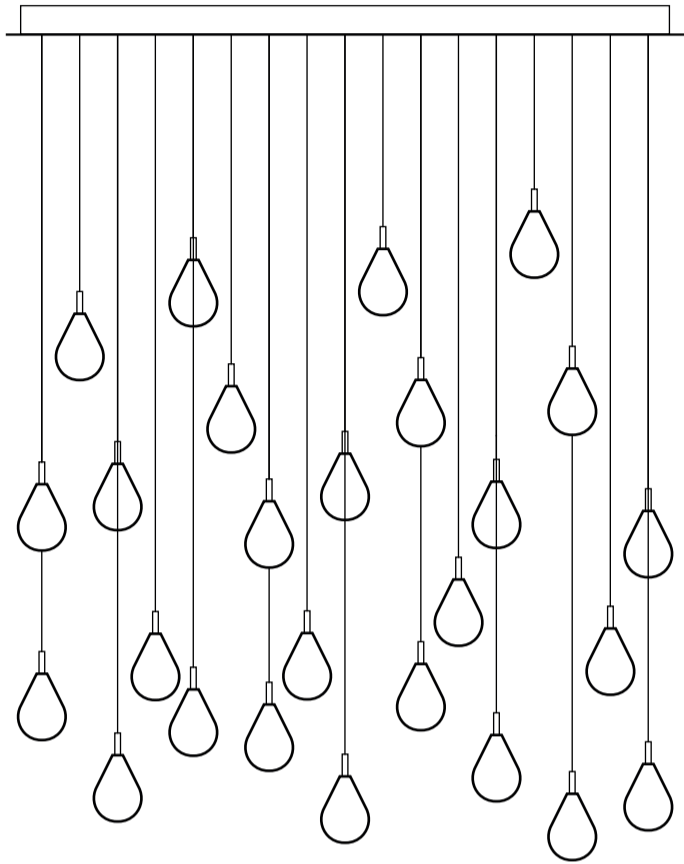

loomma

26 pcs on Rectangular Canopy
Layout and Cable Lengths

1430x380

1·	4·	7·	10·	13·	16·	19·	22·	25·
	3·	6·	9·	12·	15·	18·	21·	24·
2·	5·	8·	11·	14·	17·	20·	23·	26·

canopy height: 62 mm
canopy weight: 22 kg
total weight of this assembly: ~31 kg


Cable lengths for different color combinations

monochromatic

1: 90cm	14: 84cm
2: 130cm	15: 40cm
3: 54cm	16: 68cm
4: 147cm	17: 128cm
5: 86cm	18: 110cm
6: 122cm	19: 143cm
7: 133cm	20: 90cm
8: 43cm	21: 33cm
9: 69cm	22: 66cm
10: 94cm	23: 156cm
11: 137cm	24: 121cm
12: 121cm	25: 149cm
13: 152cm	26: 96cm

color mix - gold, silver, blue


1: 90cm (gold)	14: 84cm (blue)
2: 130cm (silver)	15: 40cm (silver)
3: 54cm (gold)	16: 68cm (gold)
4: 147cm (blue)	17: 128cm (blue)
5: 86cm (silver)	18: 110cm (silver)
6: 122cm (blue)	19: 143cm (gold)
7: 133cm (gold)	20: 90cm (blue)
8: 43cm (blue)	21: 33cm (blue)
9: 69cm (gold)	22: 66cm (silver)
10: 94cm (silver)	23: 156cm (blue)
11: 137cm (silver)	24: 121cm (blue)
12: 121cm (gold)	25: 149cm (silver)
13: 152cm (gold)	26: 96cm (gold)

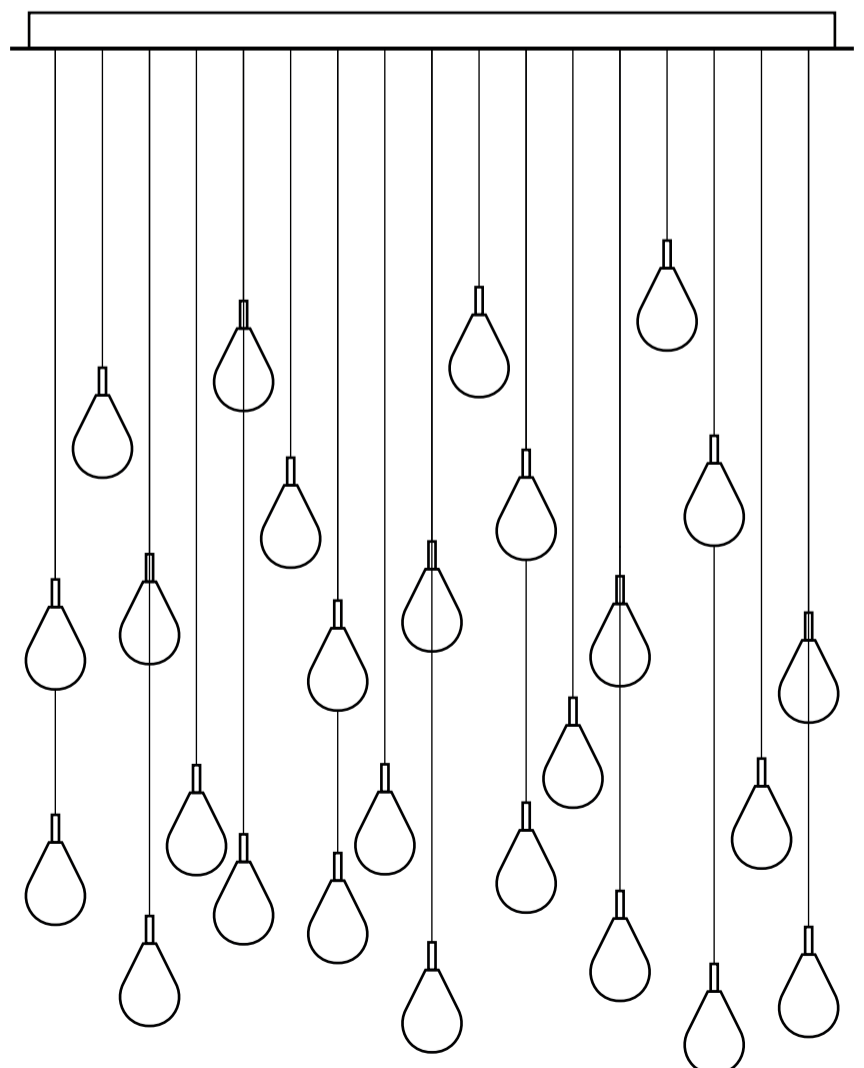


Installation Manual for Multiple Pendant Canopy

- Please read this user's manual carefully prior to installation and follow its instructions and recommendations.
- The installation of the pendant light requires more than one person.
- For safety reasons, as well as for warranty purposes, it is forbidden to use this product in breach of this manual and other purposes stipulated in this manual.
- Prior to assembly, use an appropriate circuit breaker to turn off electricity.
- All interventions regarding the wiring of the light fixture may only be carried out by a qualified electrician.
- The producer bears no liability for damage caused by improper installation.
- The surface of the mounting may also include minor imperfections due to manual production.
- The pendant light is intended for interior lighting.
- The producer reserves the right to make minor changes to the construction of the light fixture without prior notice.



1
Slip the base-plate on the incoming power supply cable from the ceiling and attach using appropriate screws and wall-plugs, which are not included in the package. Select their size and type according to the material of your ceiling and the weight of the light fixture.

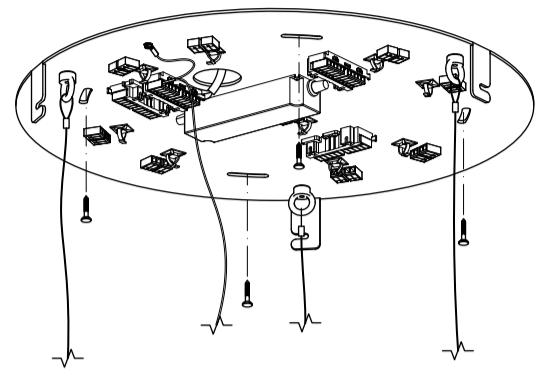



2
Shorten the cables to the required lengths (see the table on the other side). Thread them through the canopy so that the ends of the cables can be plugged into the terminal blocks. Fix the cables by tightening the screws into the rollers on the underside of the canopy.

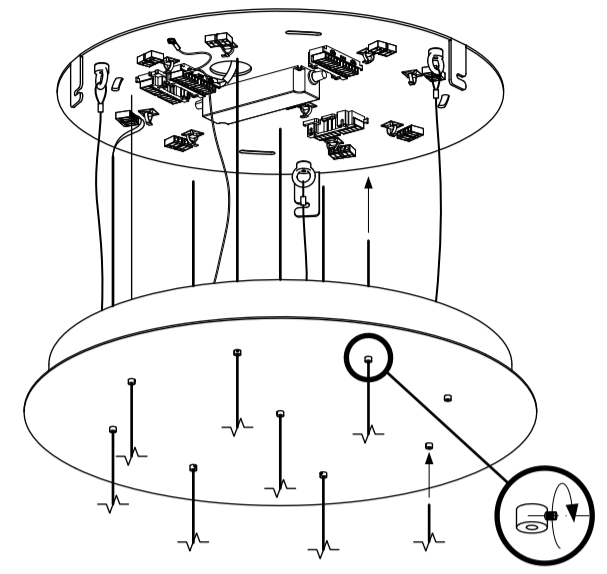

3
Perform the wiring according to the diagram. The principle of installation is the same for all canopy sizes and shapes.

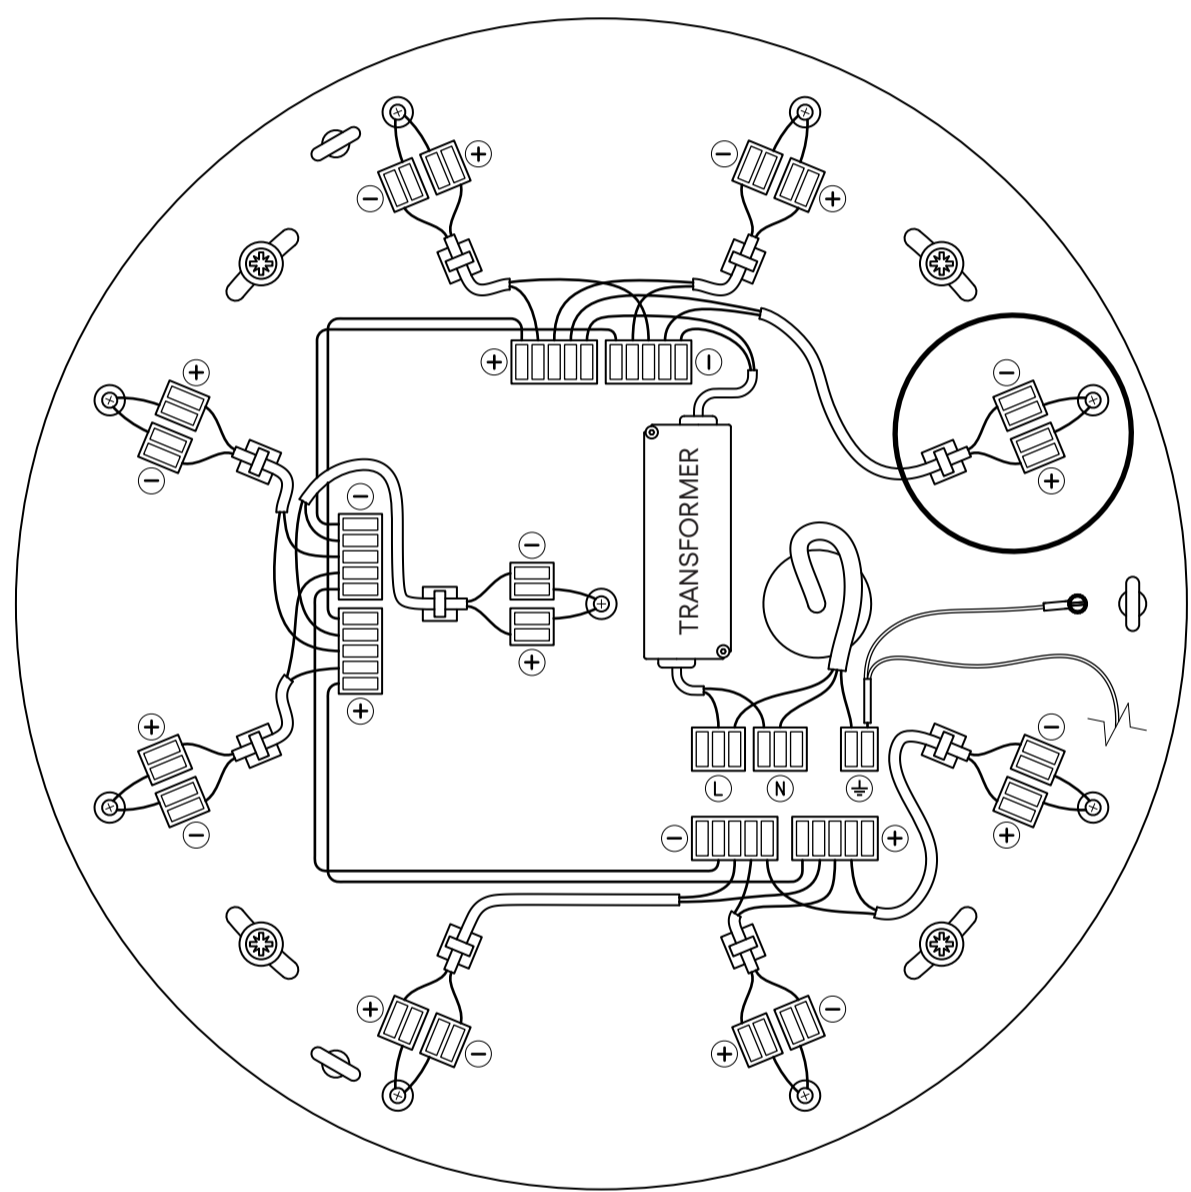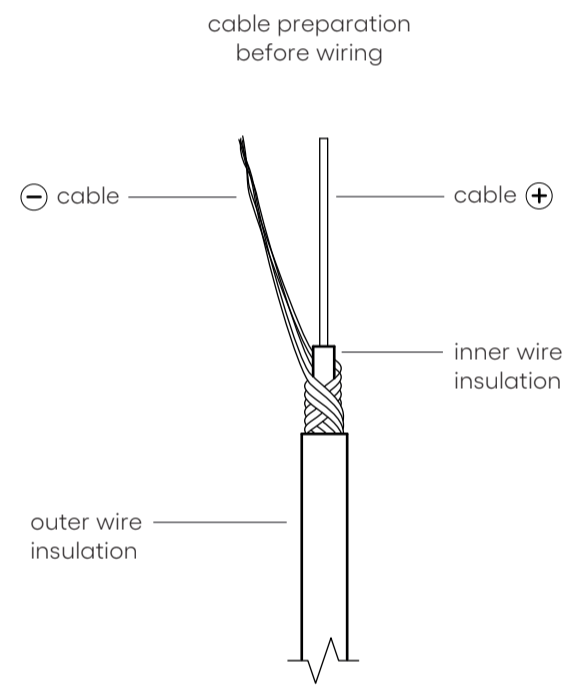

4
Lift the canopy onto the anchor plate and rotate it so that the three screws on the inside of the canopy slid into the recess in the supporting feet. If installing a rectangular canopy, slide it on the anchor plate in the direction of the arrow in the illustration.

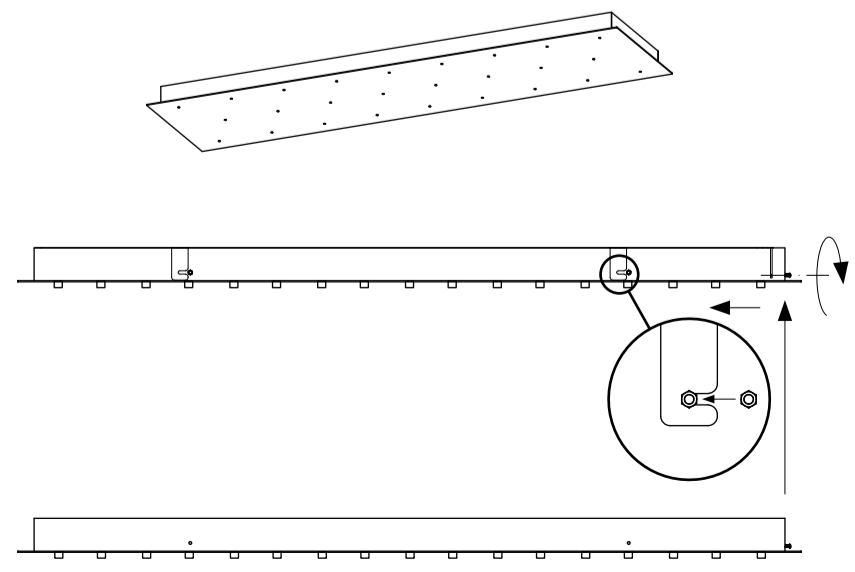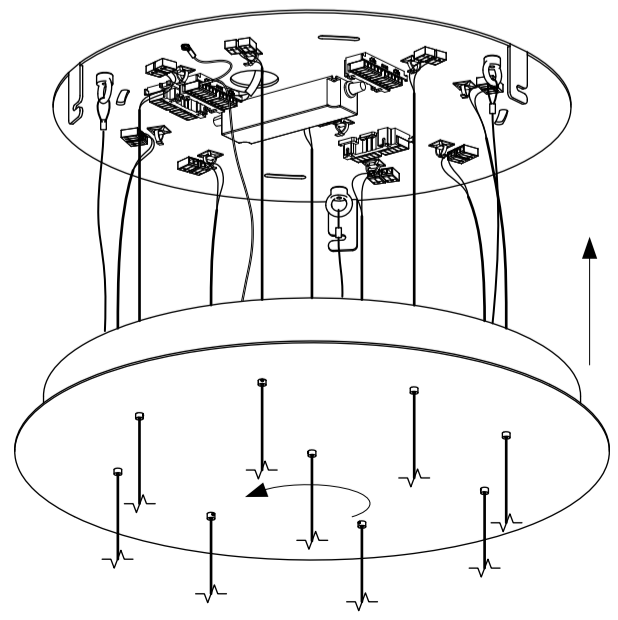

5
Screw in the locking screw completely.

